

Ubiquiti Network

Ubiquiti Network Equipment

- [Switches](#)
 - [Using cli on the switches](#)

Switches

Using cli on the switches

Getting into cli

Ubiquiti equipment is managed by the unifi tool which can run on a vm or you use a hardware box like dream machine pro. At the moment I use unifi on a dedicated vm for managing all the devices.

To get into the cli you can setup in the unifi management a ssh access which will be activated on all your ui devices. Just go to System Settings -> Administration -> Admin and you can define your ssh users.

After logging in into your device with ssh you can use the cli with:

```
→ ~ ssh admin@1.2.3.4
```

```
BusyBox v1.25.1 () built-in shell (ash)
```

```

  _ _ _ . _ _ _ _ _ _ _
| | | _ _ | _ \ _ _ / _ |
| | / \ | | _ _ | | (c) 2010-2021
| | | | \ | | \ | | Ubiquiti Networks, Inc.
| _ _ | _ / _ | _ | _ |
  | /          https://www.ui.com/
```

```
Welcome to UniFi USW-Aggregation!
```

```
sw37SANSwitch-US.5.64.8# telnet localhost
```

```
sw37SANSwitch# sho run
```

```
SYSTEM CONFIG FILE ::= BEGIN
```

```
! System Description: Unifi Switch UBNT-USL8A Switch
```

```
! System Version: v3.5.0.3
```

```
! System Name: sw37SANSwitch
```

```
! System Up Time: 0 days, 14 hours, 14 mins, 8 secs
```

```
!
```

Show tech-support information

```
→ ~ ssh admin@1.2.3.4
```

```
BusyBox v1.25.1 () built-in shell (ash)
```

```

_ _ . _ _ .
| | | _ | \ _ / |
| | / \ || _ | | (c) 2010-2021
| | | \ \ || \ | | Ubiquiti Networks, Inc.
| _ | | / _ || / | |
| / https://www.ui.com/

```

Welcome to UniFi USW-Aggregation!

```
sw37SANSwitch-US.5.64.8# telnet localhost
sw37SANSwitch# show tech-support
Usage: Help!!!!!! handler -f print_cli_progress
ls: /mnt: No such file or directory
ls: /mntlog: No such file or directory
sh: diag: not found
```

----- System Information -----

```
System Name      : sw37SANSwitch
System Location  : Default
System Contact   : Default
MAC Address     : 24:5A:4C:11:22:33
IP Address      : 1.2.3.4
Subnet Mask     : 255.255.255.0
Firmware Version : 3.5.0.3
Firmware Date    : Jan 01 1970 - 00:00:00
System Up Time   : 0 days, 14 hours, 32 mins, 14 secs
```

----- Time -----

